

VSL除去アンカー「コメント工法」アンカーテンション (拘束具配置)

E 5-2 (Aタイプ)



E 5-8 (A+A+B)



E 5-4 (Bタイプ)



E 5-8 (A+A+A+A)



 
E 5-4 (A+A)



E 5-10 (B+B+B)



E 5-6 (A+B)



E 5-10 (B+A+A+B)



E 5-6 (A+A+A)



E 5-10 (B+A+A+A+A)



E 5-8 (B+B)

